

Residue-free Auto Dropper

FSKOREA

+++

COPYRIGHT © 2025 F.S. KOREA INDUSTRIES, INC.
ALL RIGHTS RESERVED.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, without express permission of FSKOREA.

ADR ZR



Feature

Residue-free

- Concaved bottom, a design that gathers remained formula into the center
- Pipette reaches all the way to the bottom
- Can use to the last drop!



Auto Loading System

Automatically dispensed when the container is opened

Visual Impact


Elastic body is visible when closed

How It Works

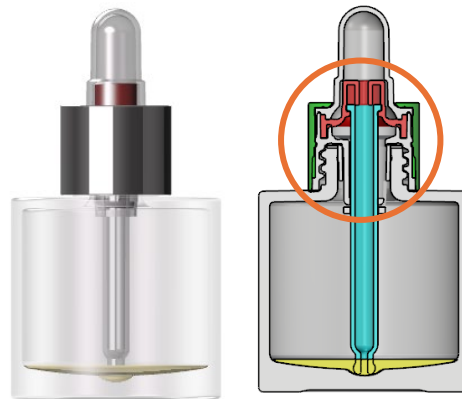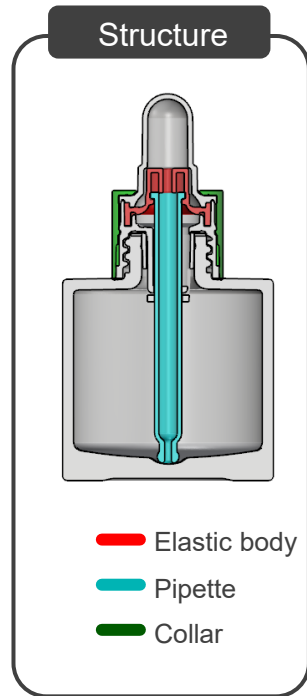

When Closed

When the dropper is closed, the pipette touches the bottom of the bottle. This lifts the elastic body, preventing formula from being drawn in.

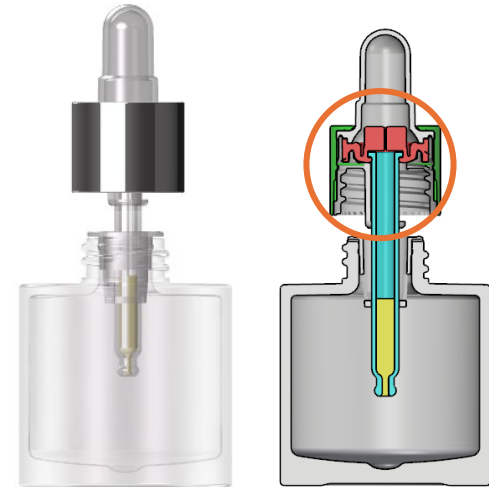

When Opened

Opening the dropper pushes the elastic body down, increasing the bulb's volume and drawing formula into the pipette.

Specification

Item



Item No.

FS ADR ZR

Capacity

30ml / 50ml

Size

Ø45 x 76.3 / Ø48 x 87.2

Material

Bulb	TPE
Elastic Body	TPE
Inner Collar	PP
Outer Collar	PP
Wiper	PE
Pipette	GLASS
Bottle	PET